

SOLAR ALL-IN-ONE ESS

12Kw Off-Grid Split Inverter

For 20Kwh~64Kwh Stackable Battery Energy Storage System



20~32Kwh + 12Kw

45~48Kwh + 12Kw

57~64Kwh + 12Kw

————— User Manual —————

Contents

1. Information on this manual	2
1.1、 Scope	2
1.2、 Target Group	2
1.3、 Safety Instructions	2
1.4、 Introduction	3
1.5、 Product Features	4
2. Product Overview	5
3. Installation	6
3.1、 Unpacking and Inspection	6
3.2、 Preparation	6
3.3、 Mounting the Unit	6
3.4、 Lithium Battery Connection	7
3.5、 All-in-one Machine Connection Diagram	8
3.6、 Lithium Battery Communication and Settings	10
3.7、 LCD setting	10
3.8、 AC Input/Output Connection	11
3.9、 PV Connection	13
3.10、 Final Assembly	14
3.11、 Starting inverter	14
4. Operation	15
4.1、 Power ON/OFF	15
4.2、 Operation and Display Panel	15
4.3、 Setup parameters description	16
5. Operating Mode Description	24
5.1、 Charging mode	24
5.2、 AC Output mode	25
6. Battery type parameters	27
6.1、 Basic parameters of supported batteries	27
6.2、 Compatible battery modules	27
7. Communication	28
7.1、 Overview	28
7.2、 USB communication port	28
7.3、 RS485 communication port	28
7.4、 Install the WIFI stick (optional)	28
7.5、 Dry contact port	29
7.6、 CT sampling detection (anti feed-in)	29
8. Failure codes and countermeasures	30
8.1、 Fault code	30
8.2、 Trouble Shooting	35
9. Protection and Maintenance	36
9.1、 Protections provided	36
9.2、 Maintenance	38
10. Technical parameters	39
10.1、 Inverter technical parameters	39
10.2、 Battery technical parameters	41
10.3、 All-in-one machine specifications	41

1. Information on this manual

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Please keep this manual for future use.

1.1 Scope

This manual provides safety and installation guidance as well as information about tools and wiring.

1.2 Target Group

This document is intended for qualified persons and end users. Tasks that do not require any particular qualification can also be performed by end users. Qualified persons must have the following skills:


1. Knowledge of how an inverter works and is operated.
2. Training in how to deal with the dangers and risks associated with installing and using electrical devices and installations.
3. Training in the installation and commissioning of electrical devices and installations.
4. Knowledge of the applicable standards and directives.
5. Knowledge of and compliance with this document and all safety information.

1.3 Safety Instructions

1. Before using the unit, read all instructions and cautionary marking on the unit, the batteries and all appropriate sections of this manual. The company has the right not to quality assurance, if not according to the instructions of this manual for installation and cause equipment damage.
2. Please be clear which kind of battery system you want, lithium battery system or lead-acid battery system, if you choose the wrong system, energy storage system can't work normally.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. All the operation and connection please professional electrical or mechanical engineer. All the electrical installation must comply with the local electrical safety standards.
5. **CAUTION**-To reduce risk of injury, charge only deep-cycle lead-acid type rechargeable batteries and lithium batteries. Other types of batteries may burst, causing personal injury and damage.
6. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
7. For optimum operation of this inverter, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter.
8. **GROUNDING INSTRUCTIONS** -This inverter should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
9. **NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
10. Do not install the all-in-one solar charge inverter in harsh environments such as moist, oily, flammable or explosive, or heavily dusty areas.

- 11、 **Warning! !** Only qualified maintenance personnel can repair this equipment. If the fault persists after troubleshooting according to the troubleshooting table, take this inverter/charger back to your local dealer or service center for repair.
- 12、 Do not reverse polarity of the battery input; otherwise, the device may be damaged or unpredictable risks may occur.
- 13、 Make sure the inverter is completely assembled, before the operation.
- 14、 Necessary to confirm that the inverter AC output power is the only input device for load, and it is forbidden to use it in parallel with other input AC power to avoid damage.
- 15、 Recommended to attach proper fuse or circuit breaker to the outside of the inverter.

1.4、 Introduction

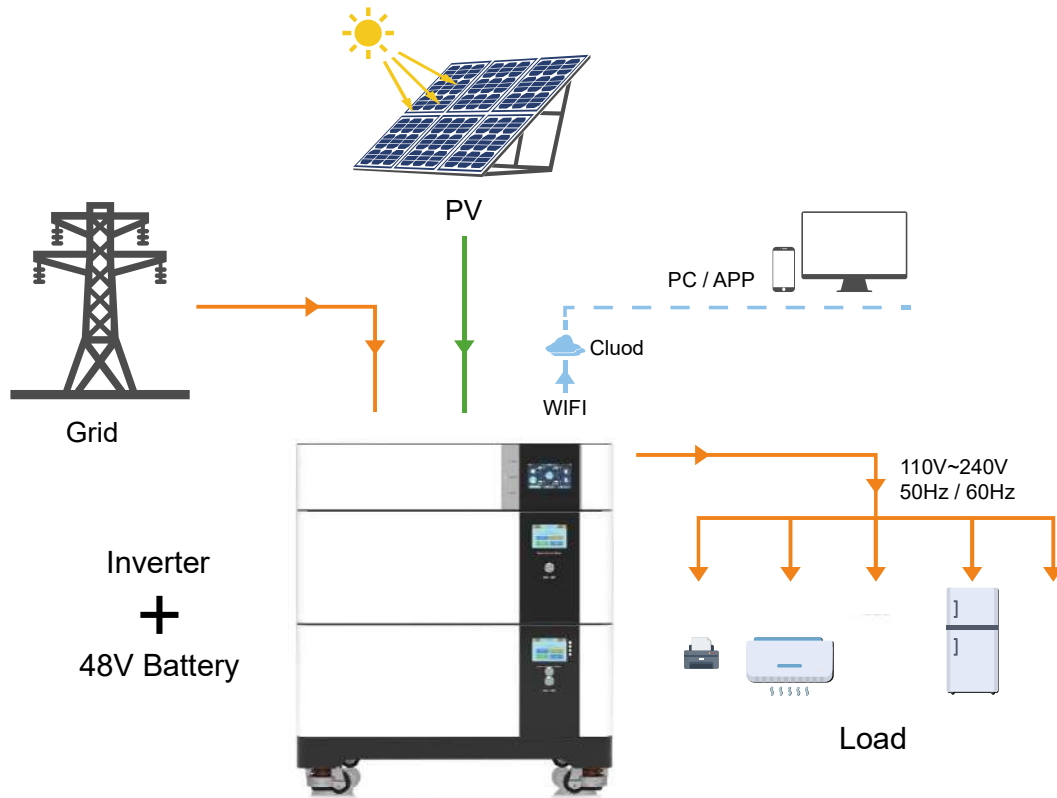


The figure below shows the system application scenario of this product. Specific system wiring method depends on the actual application scenario. A complete system consists of the following parts:

- 1、 PV module: convert light energy into DC power, and charge the battery through the inverter, or directly invert into AC power to drive the load.
- 2、 Mains or generator: connected at the AC input, to power the load while charging the battery. If the mains or generator is not connected, the system can also operate normally, and the load is powered by the battery and PV module.
- 3、 Battery: provided to ensure normal power supply to the system loads when solar energy is insufficient and the Mains is not connected.
- 4、 Household load: allow connection of various household and office loads, including refrigerators, lamps, TVs, fans and air conditioners.
- 5、 All-in-one solar charge inverter: the energy conversion unit of the whole system.
- 6、 WiFi or GPRS: can monitor system permissions remotely.

1.5、 Product Features

- 1、 It has the function of sectional charge and discharge.
- 2、 Allowing access of lead-acid battery and lithium battery.
- 3、 Anti feed-in, self-consumption function (can be hybrid power supply from solar, battery and grid).
- 4、 It can be used without battery. Solar and utility grid can power loads at the same time.
- 5、 With dual activation function of lithium battery. It can be triggered by any power supply of the mains or solar (when the li-ion battery was dormant).
- 6、 Power saving mode available to reduce no-load loss.
- 7、 Available in four charging modes: Only Solar, Mains Priority, Solar Priority and Mains & Solar hybrid charging.
- 8、 Two output modes: mains bypass and inverter output; uninterrupted power supply.
- 9、 Complete protections, including over voltage and under voltage protection, overload protection, reverse protection, etc ,360° all-round protection with a number of protection functions.
- 10、 With touch resistance LCD screen dynamic flow diagram design, easy to understand the system data and operation status.
- 11、 Full digital voltage and current double closed loop control, advanced SPWM technology, output of pure sine wave; support split-phase and single-phase pure sine wave output; Supports five different voltage levels of 100Vac, 105Vac, 110Vac, 120Vac ,127Vac per phase.
- 12、 Supports two independent MPPTs, advanced MPPT technology with a tracking efficiency of 99.9%.
- 13、 Intelligent variable speed fan to efficiently dissipate heat and extend system life.
- 14、 Diverse human-computer interaction: support CAN, USB, WiFi and RS485 communication, local and remote power on or off, dry contact control.
- 15、 Can be extended: external CT for whole house energy anti feed-in and self-consumption.

2. Product Overview

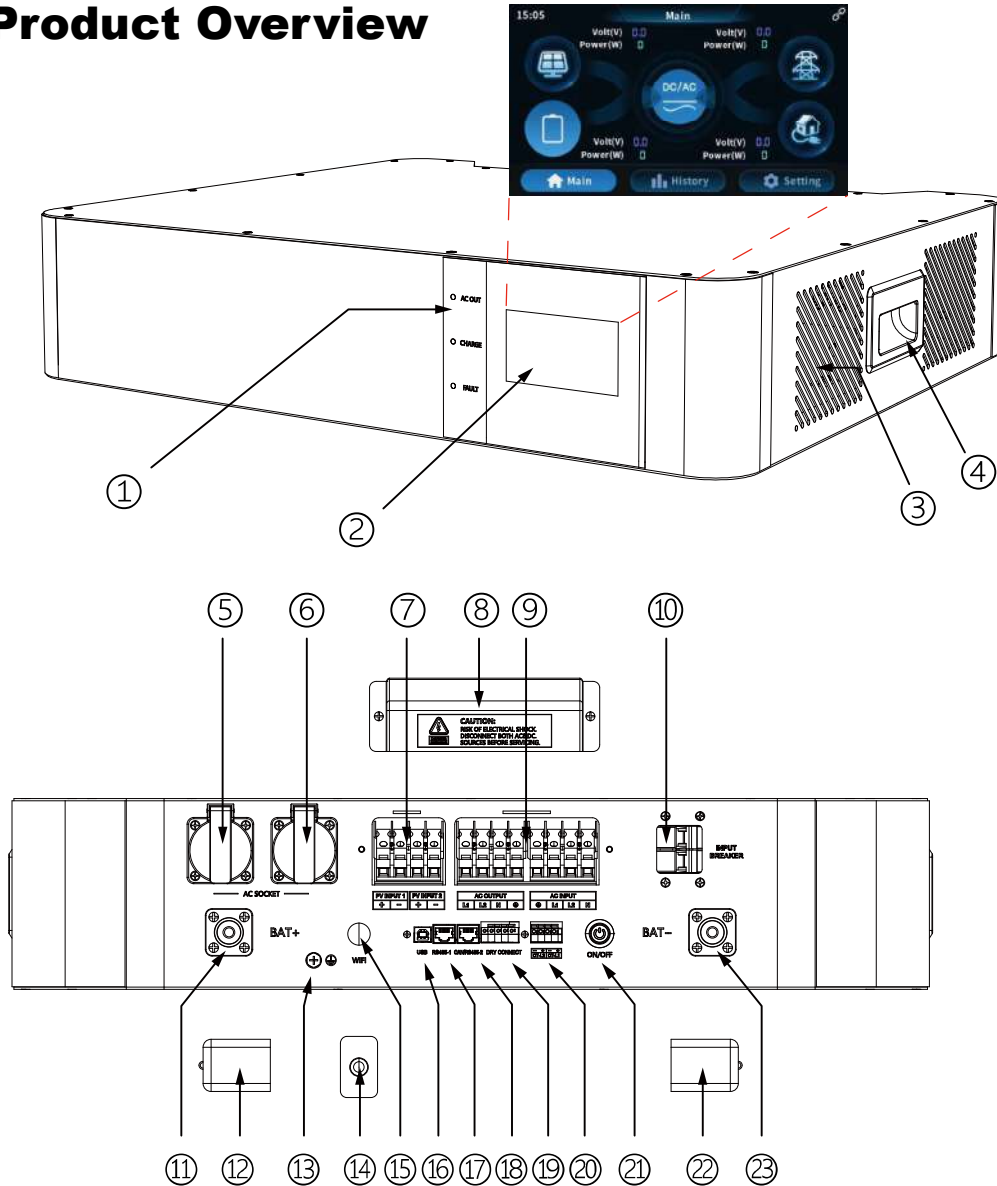

- | | |
|--------------------------|---|
| ① Status Indicator | ⑬ Ground Wire |
| ② Touch Display Screen | ⑭ WiFi Stick (optional) |
| ③ Cooling Fan | ⑮ WiFi Port (optional) |
| ④ Handle | ⑯ USB Communication Port |
| ⑤ Convenient AC Socket 1 | ⑰ RS485-1 Communication Port |
| ⑥ Convenient AC Socket 2 | ⑱ RS485-2/CAN Communication Port |
| ⑦ PV Input Port | ⑲ Dry Contact Port |
| ⑧ Safety Cover | ⑳ CT current sensing for self-consumption(optional) |
| ⑨ AC Input/Output Port | ㉑ ON/OFF Switch |
| ⑩ Overload Protector | ㉒ Battery Port - Cover |
| ⑪ Battery Input Port + | ㉓ Battery Input Port - Cover |
| ⑫ Battery Port + Cover | |

3. Installation


3.1. Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items in the package:

- ▶ The Unit x 1
- ▶ PV input connector x 2
- ▶ Battery to inverter communication line x1
- ▶ User manual x1 (or Electronic file)
- ▶ Smart Wifi Stick (optional x 1)

3.2. Preparation


Before connecting all wiring, please take off bottom cover by removing four screws as shown below.

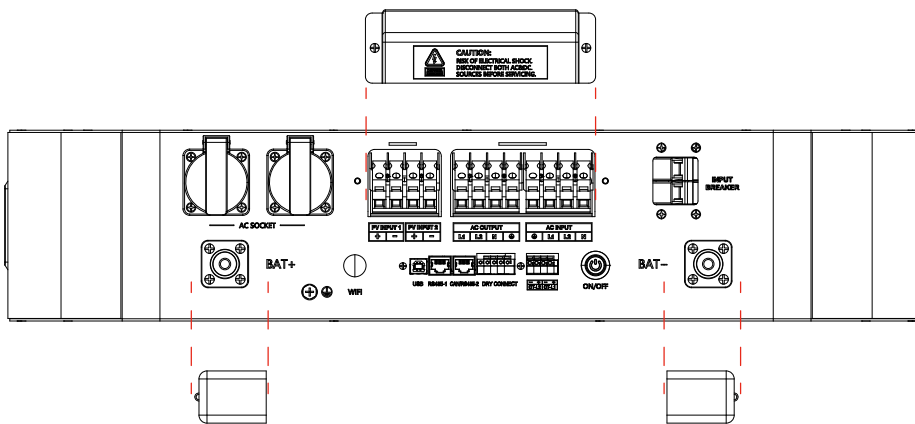

3.3. Mounting the Unit


Before choosing where to install, consider the following:

- ▶ Match our battery and base, and install the inverter on the top of the battery
- ▶ The entire system is prohibited from being installed near flammable and explosive materials
- ▶ The system should be installed on a solid and flat surface.
- ▶ The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- ▶ Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.
- ▶ When placing the device for a long time, please lock the casters of the base.

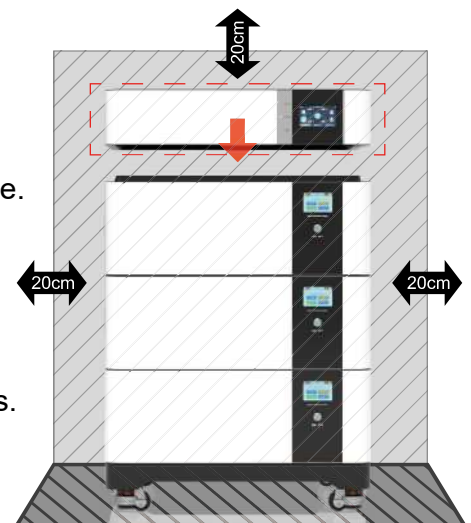


3.5、 All-in-one Machine Connection Diagram


< Wiring Diagram of Regular Version Stacked Battery >

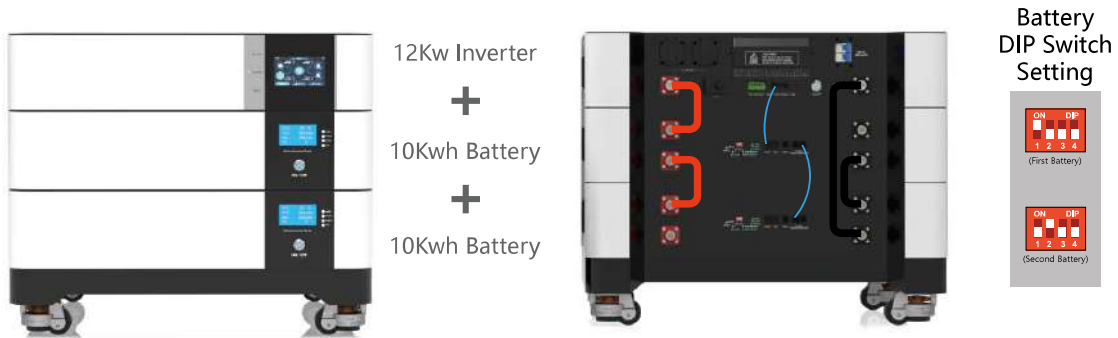

↑ 20Kwh + 12Kw ESS Wiring diagram

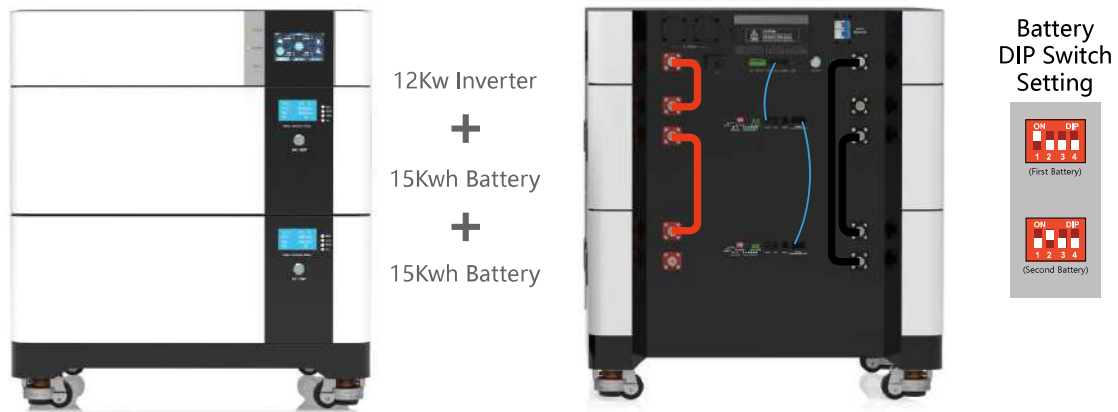

↑ 30Kwh + 12Kw ESS Wiring diagram

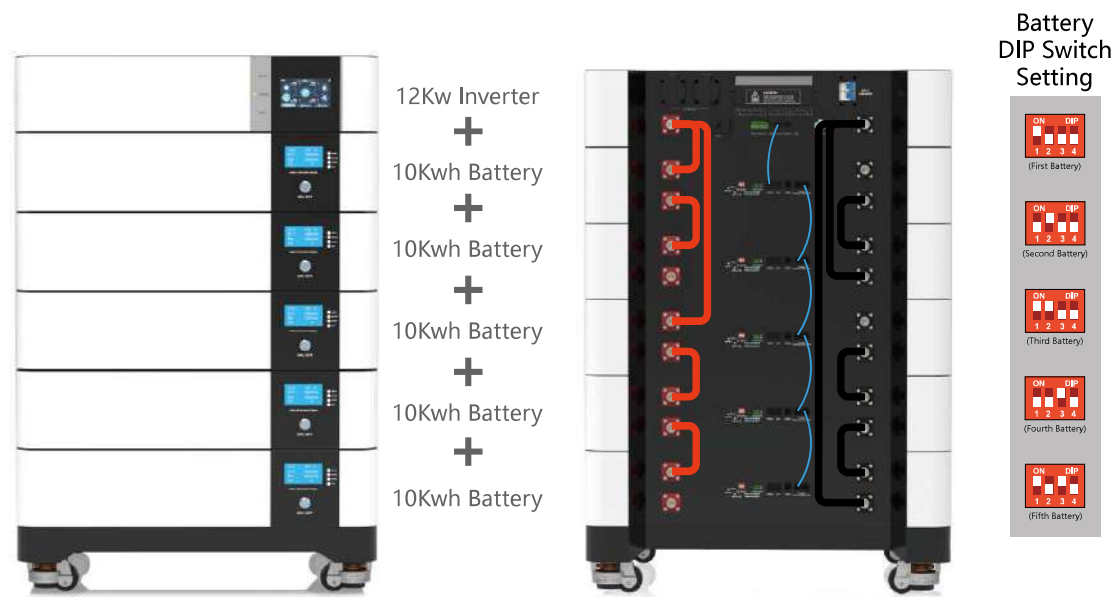


↑ 50Kwh + 12Kw ESS Wiring diagram

< ETL Certified Version Stacked Battery >



12Kw Inverter
+
16Kwh Battery
+
16Kwh Battery

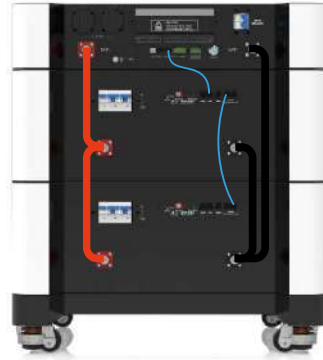


Battery
DIP Switch
Setting



↑ 32Kwh + 12Kw ESS Wiring diagram



12Kw Inverter
+
16Kwh Battery
+
16Kwh Battery
+
16Kwh Battery

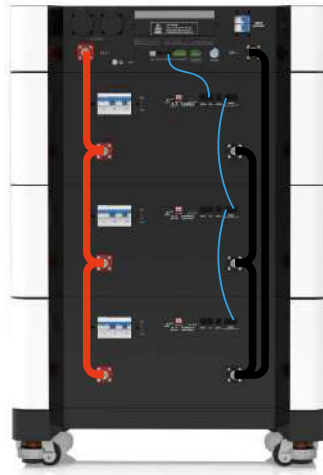


Battery
DIP Switch
Setting




↑ 48Kwh + 12Kw ESS Wiring diagram



12Kw Inverter
+
16Kwh Battery
+
16Kwh Battery
+
16Kwh Battery
+
16Kwh Battery

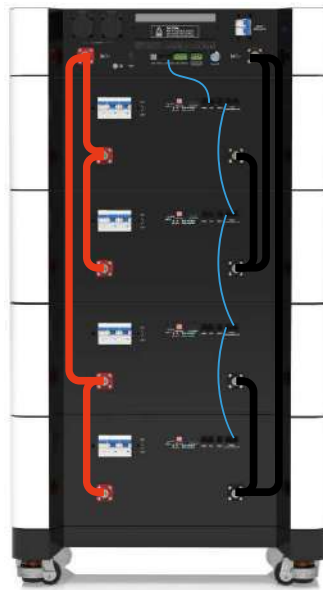



Battery
DIP Switch
Setting

 

↑ 64Kwh + 12Kw ESS Wiring diagram

3.6、 Lithium Battery Communication and Settings

Connect the end of RJ45 of battery to BMS communication port of inverter.
 Make sure the lithium battery BMS port connects to the inverter is Pin to Pin, the inverter BMS (CAN/RS482-2) port pin and RS485-2 port pin assignment shown as below:

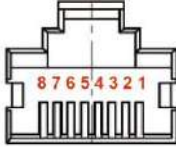Inverter			 	Battery		
Pin	CAN/RS485-2 (BMS port)	RS485-1 (Reserve)		Pin	RS485	CAN Port
1	RS485B	RS485B	1	RS485B	/	
2	RS485A	RS485A	2	RS485A	/	
3	/	GND_ISO	3	/	/	
4	CANH	/	4	/	CANH	
5	CANL	/	5	/	CANL	
6	/	5V_ISO	6	GND	/	
7	RS485-A	RS485-A	7	RS485A	GND	
8	RS485-B	RS485-B	8	RS485B	/	

Note! ! The communication connection selection for the first battery in the integrated application is set to the CAN terminal on the battery side and the CAN/RS485-2 on the inverter side.

3.7、 LCD setting

When connecting a lithium battery BMS, match the battery list parameters in section 6 of the inverter according to the battery pack specifications, and set the battery type to the closest one of "LF15/LF16/ N13/N14" in the inverter Settings. At the same time, after setting the battery type in parameter name "Battery type", switch to parameter name "RS485-2" to select the communication mode, and finally switch to "BMS protocol" to select the corresponding BMS communication protocol.

Battery type	USE	User-defined; all battery parameters can be set.
	SLd	Sealed lead-acid battery; constant-voltage charge voltage: 57.6V, floating charge voltage: 55.2V.
	FLd	Vented lead-acid battery; constant-voltage charge voltage: 58.4V, floating charge voltage: 55.2V.
	GEL	Colloidal lead-acid battery; constant-voltage charge voltage: 56.8V, floating charge voltage: 55.2V.
	LF15/LF16	Lithium iron phosphate battery (LiFePO4)LF15/LF16, corresponding to 15 strings and 16 strings of lithium iron phosphate battery; for 16 strings, default constant-voltage charge voltage is 56.8V; for 15 strings, default constant-voltage charge voltage is 53.2V; allow adjustable.
	NCM14	Ternary lithium battery; which is adjustable. The default constant voltage charging voltage of NCM 14 series is 57.6V.

CAN / RS485-2 communication	PC (default)	RS485-2 Disable the BMS communication. However, our PC and remote monitoring protocol can continue to be used.
	BMS	RS485-2 port for BMS communication.
BMS protocol Settings	When the setting Program [23] is RS485, the corresponding lithium battery manufacturer brand needs to be selected for communication	
	PLN=PYLONTECH V3.5, PCE=PACE, GXU=GOTION, DAQ, AOG=ALLGRAND, OLT=OLITER, XWD=SUNWODA	

3.8 AC Input / Output Connection

CAUTION!! Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input.

CAUTION!! There are two terminal blocks with “AC INPUT” and “AC OUTPUT” markings. Please do NOT mis-connect input and output connectors.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

Suggested cable requirement for AC wires:

Recommended AC Input Wiring diameter	Maximum bypass Input current	Recommended air switch or circuit breaker type	Torque Value
13mm ² /6AWG	63A	3P -- 63A	1.2-1.6 Nm

Recommended AC Output Wiring diameter	Maximum bypass Output current	Recommended air switch or circuit breaker type	Torque Value
13mm ² /6AWG	63A	3P -- 63A	1.2-1.6 Nm



(Convenient AC Output outlet)



* Equipped with directly usable AC sockets, each socket supports a maximum output of 2000W, making it more convenient to use.

Please follow below steps to implement AC input / AC output connection:

- 1、 Before making AC input/output connection, be sure to open DC protector or disconnector first.
- 2、 Use a screwdriver to remove the AC protective cover.
- 3、 Remove insulation sleeve 10mm for six conductors. And shorten phase **L** and neutral conductor **N** 3 mm.
- 4、 Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect **PE** protective conductor (⊕) first.

⊕ → Ground (yellow-green)

L1、 **L2** → LINE (brown or black)


N → Neutral (blue)



WARNING:

Be sure that AC power source is disconnected before attempting to connect the hard wire to the unit.

- 5、 Insert AC output wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect **PE** protective conductor (⊕) first.
- 6、 Make sure the wires are securely connected.

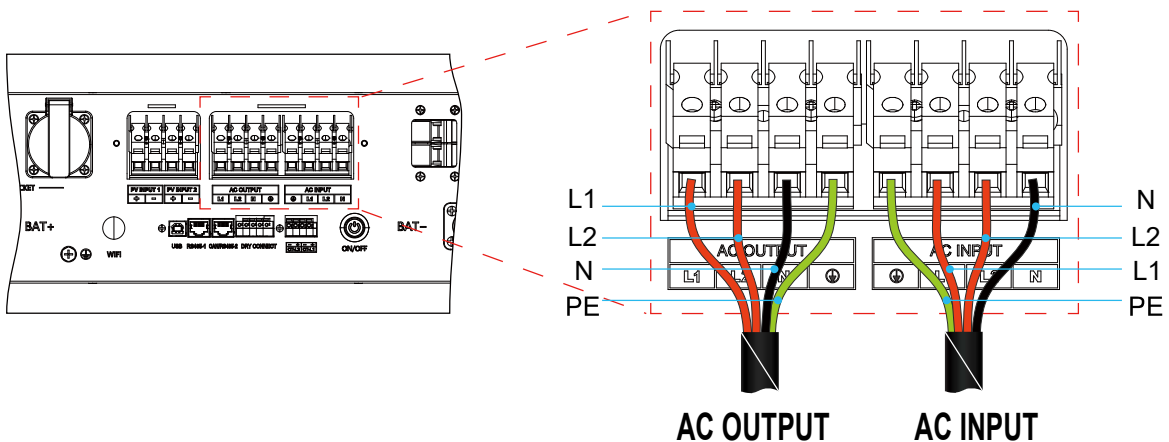

CAUTION: Important

Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these inverters are worked in parallel operation.



CAUTION:

Appliances such as air conditioner need at least 2~3 minutes to restart because it requires to have enough time to balance refrigerant gas inside of circuits. If power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check with manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this off grid solar inverter will trigger overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

3.9、 PV Connection

CAUTION: Before connecting to PV modules, please install separately a DC circuit breaker between inverter and PV modules.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Recommended PV Input Wiring diameter	Maximum PV input current	Recommended air switch or circuit breaker type	Torque Value
5.2mm ² / 10AWG	22A +22A	2P -- 32A	1.2-1.6 Nm

PV Module Selection:


When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.

Inverter Model	DL 12K-US
Max. PV Array Open Circuit Voltage	500Vdc
Start-up Voltage	120Vdc
PV Array MPPT Voltage Range	90~450Vdc


Please follow below steps to implement PV module connection:

1. Remove insulation sleeve 10 mm for positive and negative conductors.

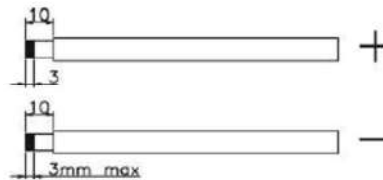


2. Check correct polarity of connection cable from PV modules and PV input connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of PV input connector.

3. Make sure the wires are securely connected.

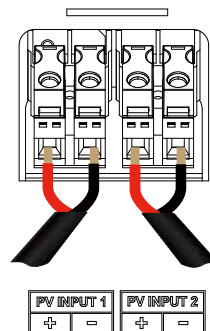

3.10、 Final Assembly

After all the wiring is connected, install the protective cover and tighten the two screws as shown in the figure below, while snapping the battery terminal protective cover back onto the terminal.

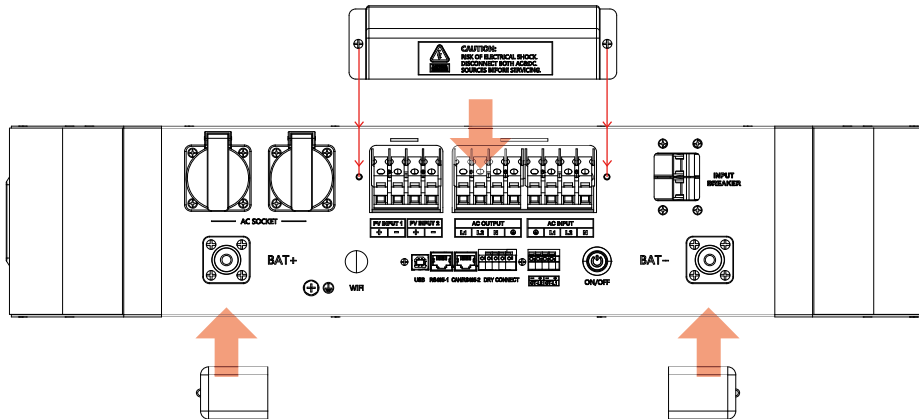

3.11、 Starting Battery & Inverter

- Step 1: Turn on the "ON/OFF" switch of the battery one by one from the lower net to start the battery
- Step 2: Press the round "ON/OFF" switch on the back of the inverter. The screen and indicator light will light up, indicating that the inverter has been activated.
- Step 3: Close the circuit breakers of PV, AC input and AC output in turn.
- Step 4: Start the load one by one according to the order of power from small to large.

4. Operation


4.1、 Power ON/OFF



Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

4.2、 Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators and a LCD display, indicating the operating status and input/output power information.

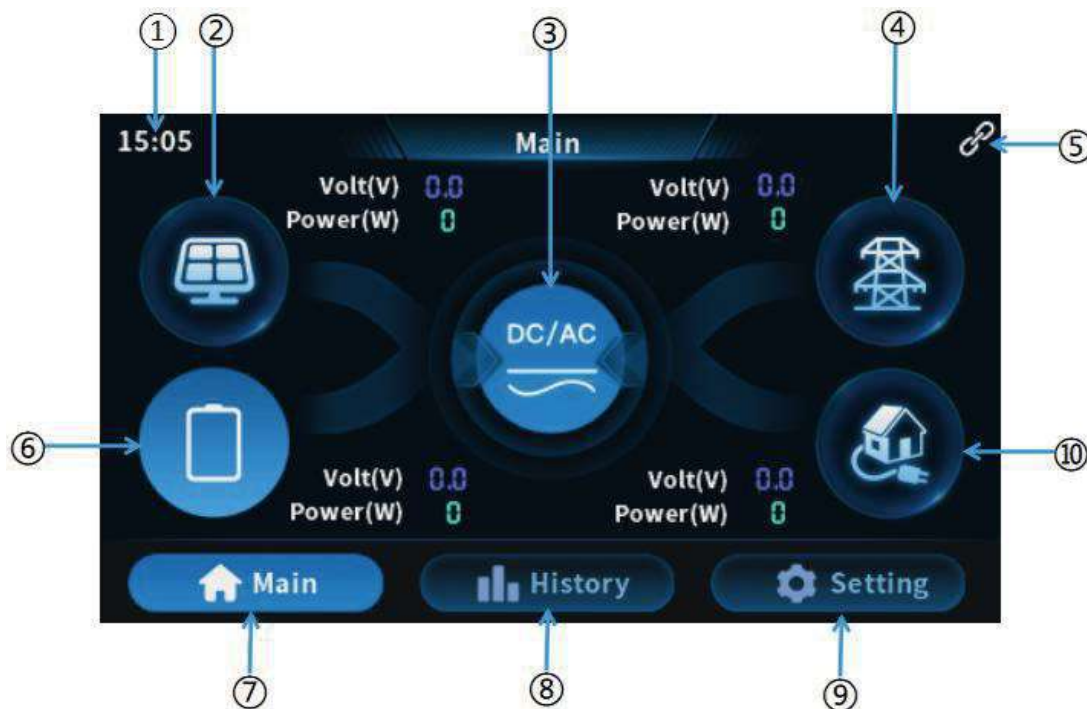

①	Time	⑥	Battery parameters
②	Photovoltaic (PV) parameters	⑦	Main
③	System information	⑧	historical data
④	AC input parameters	⑨	Menu bar
⑤	Screen communication	⑩	AC output parameters

LCD screen set menu :



Real-time data viewing method

On the LCD main screen, press the screen to scroll through the real-time data of the machine.

4.3. Setup parameters description

Screen operation instructions : Press the "Setting" button to enter the setup menu; After entering the Settings menu, you can choose the options to be set and click to enter, then press "<" and ">" Select the value of the parameters to be set, and then press "Confirm" to upload the set parameters.

Note: in parallel mode, all machines will synchronize the setting parameters of the host (the machine with "Main" is displayed on the display screen) before startup. After startup, the setting parameters of any machine will be synchronized to other machines in the system.

Parameter name	Settings	Description
Normal setting		
AC output mode priority	Line default	Mains priority mode, switching to inverter only when the mains fails.
	Battery	Battery priority mode. Switch to mains power only when the battery is under voltage or lower than the setting value of parameter "inv to line volt" ; Switch to battery discharge only when the battery is fully

		charged or higher than the setting value of parameter "line to inv volt" .
	Solar	Solar priority mode, switching to the Mains when the solar fails or the battery is lower than the set value of parameter "inv to line volt" .
	Hybrid	Hybrid mode, you can set this mode through the "hybrid→mixed mode" setting item.
AC output phase voltage setting	120Vac default	Allow to set to 100Vac/105Vac/110Vac/120Vac/127Vac, default 120V. The rated output power will be reduced= $(\text{Power Rate}) \times (\text{Vset}/120)$
AC output Frequency	50.0HZ	Bypass self-adaptation; when the mains is connected, it automatically adapts to the mains frequency; when the mains is disconnected, the output frequency can be set through this menu. The default output frequency to 60Hz of the 120Vac.
	60.0HZ	
AC Input Voltage Range	UPS default	Narrow mains input voltage range of 120Vac machine: 90~140Vac; Frequency range: 47~ 55Hz (50Hz);57Hz ~ 65Hz (60Hz);
	Generator	Diesel generators input, need to set this mode, at this time: Narrow Ac input voltage range of 120Vac machine: 90~140Vac Frequency range: 40~ 70Hz
Power saving mode	Disable default	Power saving mode disabled.
	Enable	After the power saving mode is enabled, if the load is null or less than 25W, the inverter output is turned off after a delay for a certain period of time. When the load is more than 50W, the inverter automatic restart.
Charger source priority	Hybrid charging default	PV and Mains hybrid charging; PV charging is a priority, and when the PV energy is insufficient, the Mains charging supplements. When the PV energy is sufficient, the Mains charging stops. Note: Only when the Mains bypass output is loaded, the PV charging and the mains charging can work at the same time. When the inverter works, only the PV

		charging can be started.
	Mains priority	Mains priority charging; only when the mains charging fails, the PV charging is started.
	PV priority	PV priority charging; only when the PV charging fails, the mains charging is started.
	Only PV charging	Only PV charging, with the Mains charging not activated.
AC output phase setting	Same phase	Stands for single-phase mode. The phase same of L1-L2 is 0 degree, L1/L2 in parallel connection. As AC output voltage setting was 120Vac, therefore L1-N/L2-N voltage was 120Vac, L1-L2 voltage was 0Vac. Setting allowed only when output is switched off.
	Split 120	Stands for split-phase mode. The phase difference of L1-L2 is 120 degree, L1/L2 in split connection. As AC output voltage setting was 120Vac, therefore L1-N/L2-N voltage was 120Vac, L1-L2 voltage was 208Vac. Setting allowed only when output is switched off.
	Split 180	Stands for split-phase mode. The phase difference of L1-L2 is 180 degree, L1/L2 in split connection. As AC output voltage setting was 120Vac, therefore L1-N/L2-N voltage was 120Vac, L1-L2 voltage was 240Vac. Setting allowed only when output is switched off.
Max total charging current	60A default	Maximum total charging current setting. setting range:0~220A.
Max AC charger current	120A default	setting range: 0~120A.
Buzzer alarm	Disable default	Alarm beep is enabled when the status of the main input source changes or the inverter fails.
	Enable	Buzzer was silent.
Fully charging judgment current setting	3A default	The battery type is lead-acid, when the battery voltage was greater than or equal to the floating charge value, and the charging current is less than the setting value, the battery is considered to be fully charged and the charging is stopped; If the battery type is lithium battery, when the battery voltage was greater than or

		equal to the constant voltage charging value and the charging current was less than the set value, the battery would be considered to be fully charged, the charging would be stop.
N-PE connection switchover is enabled	Disable default	Do not automatically connect the N wire to the PE wire under any working conditions.
	Enable	When there is no mains input off the grid, the neutral line automatically connects to the PE. When the bypass has mains input, the neutral line is automatically disconnected from the PE.
Battery setting		
Automatic battery activation	Disable	When the battery is dormant or not connected, the PV or mains does not automatically activate the battery to turn on the battery output.
	Enable default	When the battery is dormant or not connected, the PV or mains automatically activates the battery to turn on the battery output.
Battery Type	USE	User-defined; all battery parameters can be set.
	SLd	Sealed lead-acid battery; constant-voltage charge voltage: 57.6V, floating charge voltage: 55.2V.
	FLd	Vented lead-acid battery; constant-voltage charge voltage: 58.4V, floating charge voltage: 55.2V.
	GEL default	Colloidal lead-acid battery; constant-voltage charge voltage: 56.8V, floating charge voltage: 55.2V.
	LFP15/LFP16	Lithium iron phosphate battery LFP15/LFP16, corresponding to 15 strings and 16 strings of lithium iron phosphate battery; for 16 strings, default constant-voltage charge voltage is 56.8V; for 15 strings, default constant-voltage charge voltage is 53.2V; Allow adjustable.
	NCM14	Ternary lithium battery; which is adjustable. The default constant voltage charging voltage of NCM 14 series is 57.6V.
Battery equalizing charge voltage	57.6V default	C.V. charging voltage setting; the setting range is 48V~58.4V, with step of 0.4V; it is valid for user-defined battery and lithium battery.

Battery floating charge voltage	55.2V default	Floating charge voltage, setting range: 48V~58.4V, step: 0.4V.
Battery equalized charging time	120s default	C.V. charging maximum time setting, which means the maximum charging time to reach the set voltage of parameter " battery equalizing charge voltage " during constant-voltage charging. The setting range is 5min~900min, with a step of 5 minutes. It is valid for user-defined battery and lithium battery.
Battery recharge recovery point	52V default	After the battery is fully charged, the inverter stops charging, and restarts charging when the battery voltage is lower than the voltage value.
Battery Power to Utility Setpoint	46V default	When the parameter " Output source priority " =Bat, the battery voltage is lower than the set value, and the output is switched from the inverter to the mains. Setting range: 44V~52V.
Utility to Battery Power Setpoint	57.6V default	When the parameter " Output source priority " =Bat, the battery voltage is higher than the set value, and the output is switched from the mains to the inverter. Setting range: 48V~60V.
Low battery voltage alarm	44V default	Battery undervoltage alarm point; when the battery voltage is lower than the point, an undervoltage alarm is given (01 fault), and the output is not turned off; the setting range is 40V~52V, with a step of 0.4V.
Battery over discharge voltage (delay off)	42V default	Over-discharge voltage; when the battery voltage is lower than this judgment point, delay the time set by parameter " battery over discharge delay time " and turn off inverter output. Setting range is 40V~48V, with a step of 0.4V.
Battery over discharge voltage (immediately)	42V default	Battery discharge limit voltage; when the battery voltage is lower than the point, the output is turned off immediately (02 fault); the setting range is 40V~52V, with a step of 0.4V. It is valid for user-defined battery and lithium battery.
Battery voltage recovery point after over discharge protection (02 fault)	52V default	When the battery over discharge protection disconnects the inverter output, the battery voltage must be greater than this value to restore the inverter AC output.

Battery over discharge delay time	5s default	Over-discharge delay time; when the battery voltage is lower than the parameter “ battery over discharge voltage (delay off) ” , the inverter output will be turned off after the time set by this parameter is delayed. The setting range is 5S~55S, with a step of 5S.
Timed charging settings function	Disable default	Disable this function.
	Enable	Enable this function, utility charging the battery and carry load only in charging time slot which user set or the battery is under voltage.
	0h 0min	1st slot start charging; range: 00:00-23:59
	0h 0min	1st slot end charging; range: 00:00-23:59
	0h 0min	2st slot start charging; range: 00:00-23:59
	0h 0min	2st slot end charging; range: 00:00-23:59
	0h 0min	3st slot start charging; range: 00:00-23:59
	0h 0min	3st slot end charging; range: 00:00-23:59
Timed discharging settings function	Disable default	Disable this function.
	Enable	Enable this function, battery discharging only in discharging time slot which user set or utility is not available.
	0h 0min	1st slot start charging; range: 00:00-23:59
	0h 0min	1st slot end charging; range: 00:00-23:59
	0h 0min	2st slot start charging; range: 00:00-23:59
	0h 0min	2st slot end charging; range: 00:00-23:59
	0h 0min	3st slot start charging; range: 00:00-23:59
	0h 0min	3st slot end charging; range: 00:00-23:59
Parallel setting		
Parallel AC output	SIG default	When single inverter is used, the default is SIG mode.


mode setting (can be set in the standby mode only)	PAL	In parallel operation with single phase. Please refer to 8.3 Wiring Diagram.
Communication address setting	1 default	Parallel mode needs to be set in the range of 1-6, the ID cannot be repeated. When the power is first turned on, it will be automatically distributed; Single mode setting range 1-254.
Battery pack connection setting	Disable default	Parallel use of all battery packs.
	Enable	Battery pack not connected in parallel. Each battery is connected to each inverter.
BMS setting		
Battery BMS communication setting	OFF default	Turn off BMS communication function.
	485-BMS	BMS communicates through RS485-2.
	CAN-BMS	BMS communicates through CAN.
BMS protocol Settings	When the BMS communication setting was on, the corresponding lithium battery manufacturer brand needs to be selected for communication.	
	Pylon V3.5=PYLONTECH, AEC, PCE=PACE, GXU=GOTION, DAQ, AOG=ALLGRAND, OLT=OLITER, XWD=SUNWODA, CFE, MIT=FOXESS, VOL=WEELAND	
SOC discharge alarm (Optional when BMS is enabled)	15% default	After the BMS of the setting item BMS is enabled, the machine will alarm 07 if the battery capacity rate is lower than this value, and the alarm will be cleared if the battery capacity rate is higher than 5% of this value.
SOC switching mains (optional when BMS is enabled)	10% default	After the BMS of the setting item BMS is enabled, the machine will switch to the mains when the battery capacity rate is lower than this value and the mains power is available.
SOC switching inverter (optional when BMS is enabled)	100% default	After the BMS of the setting item BMS is enabled, it takes effect in battery priority mode. If the battery capacity rate is higher than this value, the machine will switch from the mains to the inverter mode.

SOC discharge off (optional when BMS is enabled)	5% default	After the BMS of the setting item BMS is enabled, if the battery capacity rate is lower than this value, the machine will report 08 fault and cut off the power supply or output.
SOC charging off (optional when BMS is enabled)	100% default	After the BMS of the setting item BMS is enabled, when the battery capacity rate is higher than this value, the inverter considers the battery to be full. If the battery priority mode is adopted at this time, the machine will switch the battery back from the mains.
SOC forced charging off (optional when BMS is enabled)	10% default	After the BMS of the setting item BMS is enabled, when the inverter receives a forced charging command from BMS, it will force charging the battery. When the battery capacity rate is higher than this value, the inverter will exit the force charging mode and continue running the set current mode.
Hybrid setting		
Hybrid function setting (available for some models, Hybrid mode available)	Mix default	Battery, PV and mains power supply the load together
	LOD (CT)	Anti-countercurrent, self-use according to the load power, do not input current to the mains.
	LOD (meter)	Anti-countercurrent, self-use according to the load power, do not input current to the mains.
Others setting		
Bright screen time	5min default	Can adjust the screen brightness time.
Screen brightness	10% default	Can adjust the screen brightness.
On/off control	ON	Turn on the inverter AC output.
	OFF	Turn on the inverter AC output.
Restart Control	Restart	Restart the inverter.
Language	English default	Switching between Chinese and English
Time	2024/01/01 00:00	Time setting


5. Operating Mode Description

5.1. Charging mode


1) **PV priority:** PV module will charge the battery preferentially, and the battery is charged by the Mains only when the PV system fails. During the day, solar energy is fully used to charge, while at night, it converts to the Mains. This can maintain battery level, and is ideal for areas where the grid is relatively stable and electricity price is relatively high.

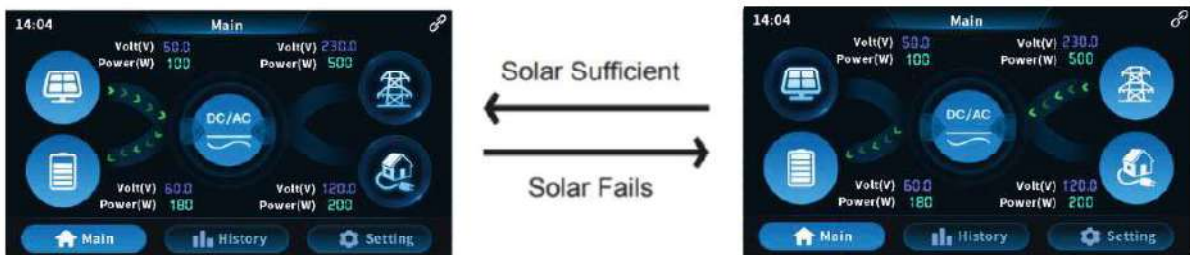

2) **Mains priority:** The Mains supply is preferentially used to charge the battery. Only when the Mains fails, the PV charging can be activated.

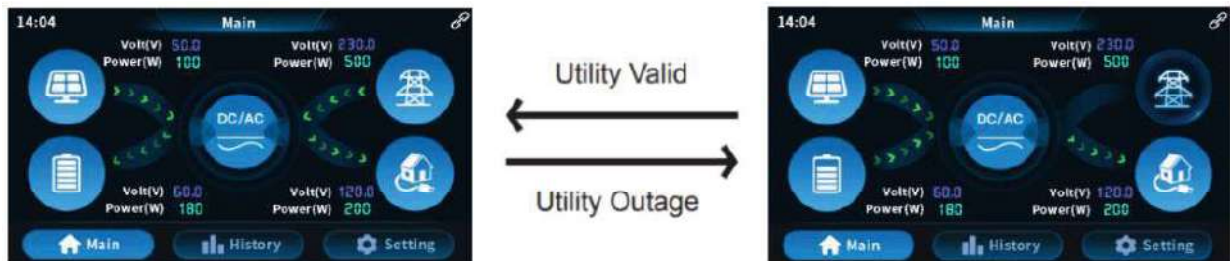

3) **Hybrid charging:** PV and mains hybrid charging. PV MPPT charging is a priority, and when PV energy is insufficient, the mains supply supplements. When the PV energy is sufficient again, the mains stops charging. This is the fastest charging mode, suitable for the areas where power grid is unstable, providing sufficient backup power supply at any time.

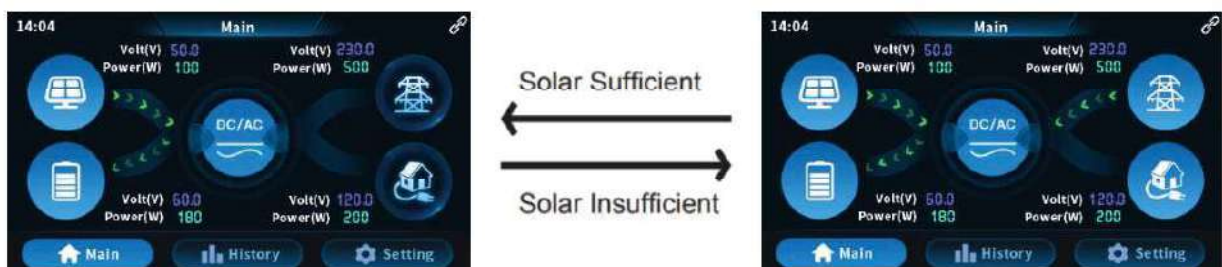

- 4) **Only Solar:** Only PV charging, without Mains charging. This is the most energy-efficient way in which battery is charged only by solar panels, and is usually used in areas with good lighting conditions.




5.2. AC output mode

➤ PV priority mode:

Switch to mains supply when the PV charging fails. This mode maximizes the use of solar energy while maintaining battery power, suitable for use in the areas with relatively stable grid.


Power supply priority: Solar→Utility→Battery.

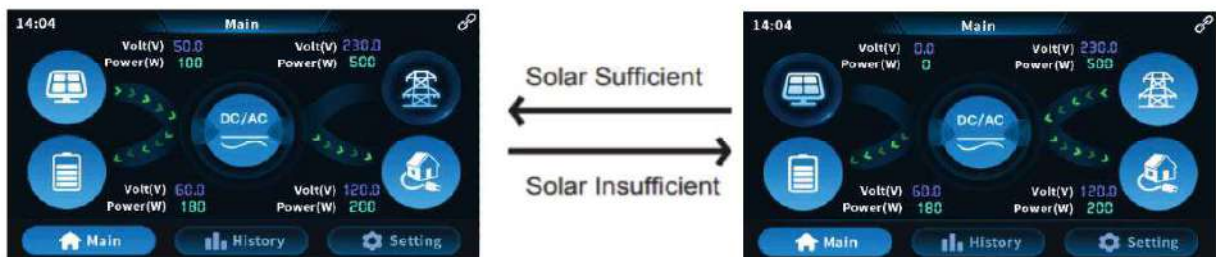

➤ Mains priority mode:

Switch to inverter only when the mains fails (when there was mains power, switch to mains power for charging and power supply). Then, the unit is equivalent to a backup UPS, suitable for areas with unstable grid. Switching does not affect PV charging.


Power supply priority: Utility→Solar→Battery.

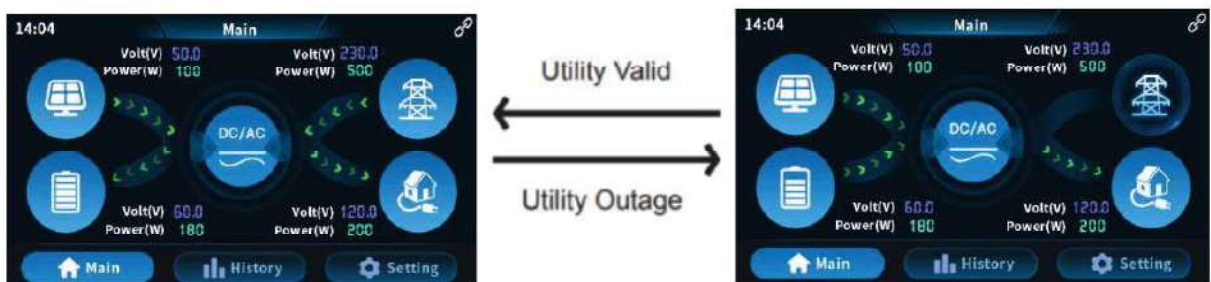

➤ **Battery priority mode:**

Switch to mains supply only when the battery discharge undervoltage is lower than the set point (item 16). When the charging battery is higher than the set point of (17 setting item), switch to the battery discharge mode. This can cycle the battery charge and discharge. This mode maximizes the use of DC power and is used in the area with stable grid. Switching does not affect PV charging.

Power supply priority: Solar→Battery→Utility.

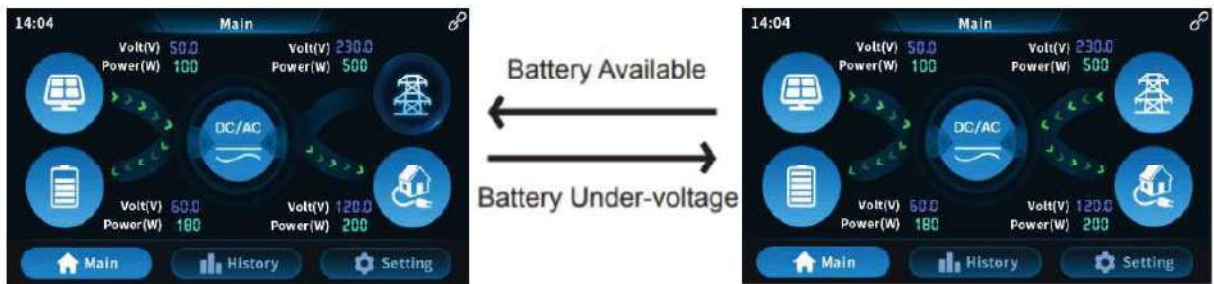

➤ **Hybird mode:**

LOD: Inverter power generation energy only to the load (generation power & Load power).

Note: mixed load, mains and photovoltaic are loaded together, photovoltaic is not enough to supplement the mains.



6. Battery type parameters

6.1、 Basic parameters of supported batteries


Battery type	Lithium iron phosphate battery (LiFePO4 / LF16)
Overvoltage disconnection voltage	60V
Battery fully charged recovery point(setup item 15)	53.6V (Adjustable)
Boost charge voltage	56.8V (Adjustable)
Floating charge voltage	56.8V (Adjustable)
Undervoltage alarm voltage (01 fault)	49.6V (Adjustable)
Undervoltage alarm voltage recovery point(01 fault)	Undervoltage alarm voltage +0.8V
Low voltage disconnection voltage(04 fault)	48.8V (Adjustable)
Low voltage disconnection voltage recovery point (04 fault)(setup item 35)	52.8V (Adjustable)
Discharge limit voltage	46.4V
Over-discharge delay time	30s (Adjustable)
Boost charge duration	120 minutes (Adjustable)

6.2、 Compatible battery modules

Battery Modules	HS51200-10	LFP51300
Nominal Voltage	51.2V	51.2V
Nominal Capacity(Single module)	200Ah	300Ah
Energy (Single module)	10.24Kwh	15.36Kwh
Discharging Cut-off Voltage	57.6V±0.2V	57.6V±0.2V
Charging Cut-off Voltage	44.8V±0.2V	44.8V±0.2V
Nominal/Max. Charging Current (Single module)	40A / 100A(5s)	40A / 100A(5s)
Nominal/Max. Discharging Current (Single module)	100A / 200A(5s)	100A / 200A(5s)
Communication	RS485/CAN	RS485/CAN
Number of modules supported	2~5pcs	2~4pcs
Connection	Parallel connection	Parallel connection


7. Communication

7.1. Overview

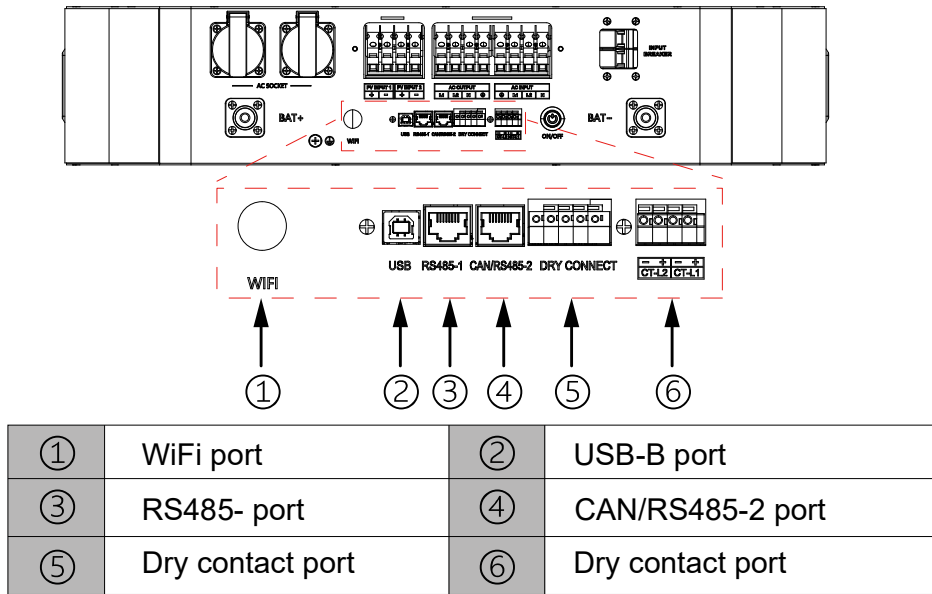


7.2. USB communication port

This is a USB communication port, which can be used for USB communication with the optional PC host software. To use this port, you should install the corresponding "USB to serial chip CH340T driver" in the computer.

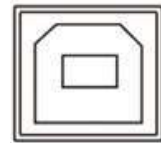

7.3. RS485 communication port


This port is an RS485 communication port. There are two RS485 ports: RS485-1 and RS485-2

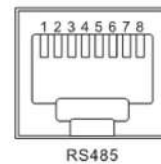

The RS485 communication port has two functions

- 1) RS485 communication with the lithium battery BMS directly via the RS485-2 port (custom required);
- 2) RS485-1/RS485-2 also allows direct connection with the optional RS485 to WiFi/GPRS communication module developed by our company through this port. After the module is selected, you can connect the inverter through the mobile phone APP, on which you can view the operating parameters and status of the device. (Note: RS485-2 can only be used when BMS is not enabled).

7.4. Install the WIFI stick (optional)

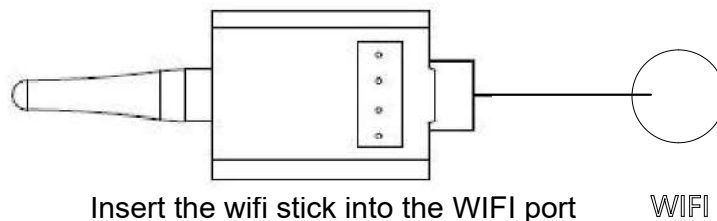

* For detailed WiFi configuration, please refer to the WiFi Setup Guide.


7.5、 Dry contact port

N-NO-NC function:

Working principle: This dry node can control the ON/OFF of the diesel generator.

1) Normally, NC-N point is connected and the NO-N point is disconnected;

2) When the battery voltage reaches the low voltage disconnection point, the relay coil is energized, the NO-N point is connected while NC-N point is disconnected. At this point, NO-N point can drive resistive loads specifications: 125VAC/1A, 230VAC/1A or 30VDC/1A.

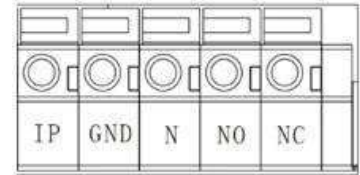

IP-GND function:

Working principle: This dry node can remote control the AC output power ON/OFF of the inverter.

1) IP-GND is disconnected → AC output ON;


2) IP-GND is connected → AC output OFF;

7.6、 CT sampling detection (anti feed-in)

(CT+)-GND function:

Optional function, not standard function;

Working principle: By sampling the input line current, self-use function is realized. But need to use our configuration of CT sensors;

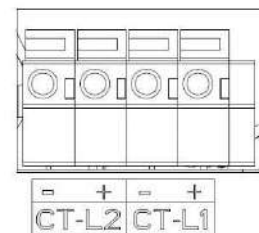

WARNING:

This inverter does not have the corresponding grid-connected authentication, this function can only be off-grid applications; if used for grid-connected use, will violate the local law, specific consultation with local lawyers.

8. Failure codes and countermeasures

8.1、 Fault code

Fault code	Fault name	Whether it affects the output or not	Description
【01】	Battery under voltage warning	No	If the battery voltage is lower than "battery under voltage alarm" setting, the battery was in the undervoltage state.
【02】	Battery under voltage protection	Yes	When the battery voltage was low, turn off the output to stop the battery discharge protection.
【03】	Average battery discharge current over current protection	Yes	If the average battery discharge current exceeds the maximum input battery current for 1 minute, turn off the output to stop the battery discharge protection.
【04】	Instantaneous battery discharge over current protection	Yes	If the instantaneous value of the battery discharge current is greater than the maximum instantaneous value of the device, turn off the output to stop the battery discharge protection.
【05】	Battery not connected	Yes	Battery not connected warning.
【06】	Battery over voltage	Yes	When the selected battery type or set battery voltage is exceeded, turn off the output to stop the battery charging protection.
【07】	BMS low battery talarm	No	BMS alarm low battery (Set BMS enablement to work)
【08】	BMS low battery protection	Yes	The BMS battery capacity rate is low. Disable the output to stop the battery discharge protection. (Set BMS enablement to work)

【09】	Bypass overload protection	Yes	If the mains is overloaded, turn off the AC output and stop the mains charging.
【10】	Battery output overload protection	Yes	If the battery discharge inverter is overloaded, turn off AC output and stop battery discharge protection.
【11】	Battery inverter output short circuit	Yes	If the AC output of the battery inverter discharge is short circuiting, turn off the AC output and stop the battery discharge protection.
【12】	The AC output of the battery inverter over circuit	Yes	If the AC output of the battery inverter discharge is over circuit, turn off the AC output and stop the battery discharge protection.
【13】	The DC component of the battery inverter voltage is abnormal	Yes	If the DC component of the battery inverter voltage is abnormal, turn off the AC output and stop the battery discharge protection.
【14】	Bus over voltage software sampling protection	Yes	Internal battery boost, boost bus voltage overvoltage software protection, turn off AC output and charge.
【15】	Bus over voltage hardware sampling protection	Yes	Internal battery boost, boost bus voltage overvoltage hardware protection, turn off AC output output and charge.
【16】	Bus under voltage protection	Yes	Internal battery boost, boost bus voltage undervoltage protection, turn off AC output output and charge.
【17】	Bus short circuit protection	Yes	Internal battery boost, boost bus voltage short-circuit protection, turn off AC output output and charge.

【18】	The PV input voltage is over voltage	Yes	The solar input voltage exceeds the maximum allowable input voltage protection.
【19】	-	-	-
【20】	PV over current protection	No	Solar charging overcurrent hardware protection, turn off solar charging.
【21】	-	-	-
【22】	The PV heat sink is overheated. Procedure	No	If the temperature of the solar charging radiator is too high, turn off the solar charging.
【23】	The AC heat sink is overheated. Procedure	Yes	If the temperature of the heat sink is too high, turn off the AC charging or battery inverter discharge.
【24】	The temperature of the main transformer is overheated	Yes	If the internal main transformer temperature is too high, turn off the AC charging or battery inverter discharge.
【25】	Ac input relay short circuit	Yes	Ac input relay short-circuit protection prevents the inverter AC output from being pumped back into the bypass AC input.
【26】	-	-	-
【27】	Fan failure	Yes	If the fan is blocked or fails, disable the inverter output and charging functions.
【28】	-	-	-
【29】	-	-	-
【30】	Type detection error	Yes	The model is not set before delivery, and the model identification is wrong.
【31】	-	-	-
【32】	-	-	-
【33】	Parallel control can communication is	Yes	In parallel mode, CAN communication is lost, AC output

	faulty		and charging are turned off.
【34】	Parallel control can communication is faulty	Yes	In parallel mode, CAN communication is lost, AC output and charging are turned off.
【35】	Parallel mode is faulty	Yes	In parallel mode, the system has inconsistent machine parallel mode 【31】 Settings.
【36】	Parallel current sharing fault	Yes	In parallel mode, the AC output of the battery inverter differs greatly from the non-uniform current output of each machine. Turn off the AC output and charge.
【37】	Parallel ID setting error	Yes	In parallel mode, the RS485 addresses repeatedly conflict. The fault stops the AC output and charge. After the host automatically reallocates the address, the fault is cleared and the host enters the parallel.
【38】	Inconsistent Battery in parallel mode	Yes	In parallel mode, the battery voltage input of each machine varies greatly.
【39】	Inconsistent AC input source in parallel mode	Yes	Inconsistent AC input source in parallel mode
【40】	The parallel mode synchronization fails	Yes	Parallel mode, hardware synchronization signal reception failure, stop parallel and AC output.
【41】	Inconsistent system firmware version in parallel mode	Yes	If the program version is inconsistent in the parallel system, stop the parallel and AC output.
【42】	The parallel communication cable is faulty	Yes	The parallel communication line is faulty. Stop the parallel and AC output.
【43】	Serial number error	Yes	The serial number is not set before the factory, or the factory

			serial number is set repeatedly in the system.
【49】	BMS communication error	No	Check whether the communication line is connected correctly and whether BMS is set to the corresponding lithium battery communication protocol
【50】	BMS other alarm	No	Check the BMS fault type and troubleshoot lithium battery problems
【51】	BMS battery over temperature alarm	No	BMS alarm lithium battery over temperature
【52】	BMS battery over current alarm	No	BMS alarm lithium battery over current
【53】	BMS battery over voltage alarm	No	BMS alarm lithium battery over voltage
【54】	BMS battery low voltage alarm	No	BMS alarm lithium battery low voltage
【55】	BMS battery low temperature alarm	No	BMS alarm lithium battery low temperature

8.2、 Trouble Shooting

Fault code	Faults	Handling measures
/	No display on the screen	Check if the battery air switch or the PV air switch has been closed; if the switch is in the "ON" state; press any button on the screen to exit the screen sleep mode.
【06】	Rechargeable battery overvoltage protection	Measure if the battery voltage exceeds rated. If it exceeds, the battery needs to be discharged until the voltage is below the overvoltage recovery point of the battery.
【01】 【02】	Battery under voltage protection	Charge the battery until it returns to the low voltage disconnection recovery voltage.
【27】	Fan failure	Check if the fan is not turning or blocked by foreign object.

【22】 【23】	Heat sink over temperature protection	When the temperature of the device is cooled below the recovery temperature, normal charge and discharge control is resumed.
【09】 【10】	Bypass overload protection, inverter overload protection	1.Reduce the use of power equipment; 2.Restart the unit to resume load output.
【11】	Inverter short circuit protection	1.Check the load connection carefully and clear the short-circuit fault points; 2.Re-power up to resume load output.
【18】	PV overvoltage	Use a multimeter to check if the PV input voltage exceeds the maximum allowable input voltage rated.
【05】	Battery missed alarm	Check if the battery is not connected or if the battery circuit breaker is not closed.
【40】 【42】	Parallel connection fault	Check whether the parallel line is not connected well, such as loose or wrong connection.
【37】	Parallel ID setting error	Check whether the setting of parallel ID number is repeated.
【36】	Parallel current sharing fault	Check whether the parallel current sharing line is not connected well, such as loose or wrong connection.
【39】	Inconsistent AC input source in parallel mode	Check whether the parallel AC inputs are from the same input interface.
【41】	Inconsistent system firmware version in parallel mode	Check whether the software version of each inverter is consistent.

Note: If you encounter a product fault that cannot be solved by the methods in the above table, please contact our after-sales service department for technical support, and do not disassemble the equipment yourself.

9. Protection and Maintenance

9.1、 Protections provided

No.	Protections	Description
1	PV current/ power limiting protection	When charging current or power of the PV array configured exceeds the PV rated, it will charge at the rated.
2	PV night reverse-current protection	At night, the battery is prevented from discharging through the PV module because the battery voltage is greater than the voltage of PV module.
3	Mains input over voltage protection	When the mains voltage exceeds 140V, the mains charging will be stopped and switched to the inverter mode.
4	Mains input under voltage protection	When the mains voltage is lower than or 85V , the mains charging will be stopped and switched to the inverter mode.
5	Battery over voltage protection	When the battery voltage reaches the overvoltage disconnection point, the PV and the mains will be automatically stopped to charge the battery to prevent the battery from being overcharged and damaged.
6	Battery low voltage protection	When the battery voltage reaches the low voltage disconnection point, the battery discharging will be automatically stopped to prevent the battery from being over-discharged and damaged.
7	Load output short circuit protection	When a short circuit fault occurs at the load output terminal for more than 200 milliseconds, the AC output is immediately turned off.
8	Heat sink over temperature protection	When the internal temperature is too high, the all-in-one machine will stop charging and discharging; when the temperature returns to normal, charging and discharging will resume.
9	Overload protection	Output again 3 minutes after an overload protection, and turn the output off after 5 consecutive times of overload protection until the machine is re-powered. For the specific overload level and duration, refer to

		the technical parameters table in the manual.
10	PV reverse polarity protection	When the PV polarity is reversed, the machine will not be damaged.
11	AC reverse protection	Prevent battery inverter AC current from being reversely input to Bypass.
12	Bypass over current protection	Built-in AC input overcurrent protection circuit breaker.
13	Battery input over current protection	When the discharge output current of the battery is greater than the maximum value and lasts for 1 minute, the AC input would switched to load.
14	Battery input protection	When the battery is reversely connected or the inverter is short-circuited, the battery input fuse in the inverter will blow out to prevent the battery from being damaged or causing a fire.
15	Charge short protection	When the external battery port is short-circuited in the PV or AC charging state, the inverter will protect and stop the output current.
16	CAN communication loss protection	In parallel operation, an alarm will be given when CAN communication is lost.
17	Parallel connection error protection	In parallel operation, the equipment will be protected when the parallel line is lost.
18	Parallel battery voltage difference protection	In parallel operation, the equipment will be protected when the battery connection is inconsistent and the battery voltage is greatly different from that detected by the host.
19	Parallel AC voltage difference protection	In parallel operation, the equipment will be protected when the AC IN input connection is inconsistent.
20	Parallel current sharing fault protection	In parallel operation, the running equipment will be protected when the load difference of each inverter is large due to improper connection of current sharing line or device damage.

21	Synchronization signal fault protection	The equipment will be protected when there is a fault in the guidance signal between parallel buses, causing inconsistent behavior of each inverter.
----	---	--

9.2、 Maintenance

1. In order to maintain the best long-term performance, it is recommended to conduct following checks twice a year.
2. Make sure that the airflow around the unit is not blocked and remove any dirt or debris from the heat sink.
3. Check that all exposed wires are damaged by exposure to sunlight, friction with other objects around them, dryness, bite by insects or rodents, etc., and the wires shall be repaired or replaced if necessary.
4. Verify for the consistency of indication and display with the operation of the device. Please pay attention to the display of any faults or errors, and take corrective actions if necessary.
5. Check all wiring terminals for corrosion, insulation damage, signs of high temperature or burning/discoloration, and tighten the screws.
6. Check for dirt, nesting insects and corrosion, and clean up as required.
7. If the arrester has failed, replace in time to prevent lightning damage to the unit or even other equipment of the user.

The company does not assume any liability for damage caused by:



- a) Improper use or use in improper site.
- b) Open circuit voltage of the PV module exceeds the maximum allowable voltage rated.
- c) Temperature in the operating environment exceeds the limited operating temperature range.
- d) Disassemble and repair the all-in-one solar charge inverter without permission.
- e) Force majeure: Damage that occurs in transportation or handling of the all-in-one solar charge inverter.

DANGER

Danger of electric shock! When doing the above operations, make sure that all power supplies of the all-in-one machine have been disconnected, and all capacitors have been discharged, and then check or operate accordingly!

10. Technical parameters

10.1、 Inverter technical parameters

Model	AL48V-M12K
AC Mode	
Rated input voltage	120(L1/N, L2/N)/240Vac(L1/L2)
Input voltage range	(85Vac~140Vac)±2%
Frequency	50Hz/60Hz (Auto detection)
Frequency Range	47±0.3Hz~55±0.3Hz (50Hz); 57±0.3Hz~65±0.3Hz (60Hz);
Overload/short circuit protection	Circuit breaker
Efficiency	>95%
Conversion time (bypass and inverter)	10ms (typical)
AC reverse protection	Yes
Max. bypass phase overload current	2pole, 63A/63A(L1/L2)
Inverter mode	
Output voltage waveform	Pure sine wave
Rated output power (VA)	Split phase: 12000
	Single phase: 7200 (limited by the wiring terminals)
Rated output power (W)	Split phase: 12000
	Single phase: 7200 (limited by the wiring terminals)
Power factor	1
Rated output voltage (Vac)	120Vac (L1/N, L2/N)/240Vac(L1/L2)
Output voltage error	±5%
Output frequency range (Hz)	50Hz±0.3Hz/60Hz±0.3Hz
Maximum Efficiency	>91%
Overload protection	(102% < load <110%) ±5%: report error and turn off the output after 5 minutes; (110% < load < 125%) ± 5%: report error and turn off the output after 10 seconds; Load >125% ±5%: report error and turn off the output after 5 seconds;
Peak power	Split phase: 18000VA
	Single phase: 18000VA
Loaded motor capability	6HP
Output short circuit protection	Can protect, after continuous short circuit for 1 second
Bypass circuit breaker phase specification	2pole, 63A/63A(L1/L2)

Rated battery input voltage	51.2V (Minimum starting voltage 44V)
Battery voltage range	40.0Vdc~58.6Vdc±0.6Vdc (Undervoltage alarm /shutdown voltage/overvoltage alarm / overvoltage recovery... settable on LCD screen)
Power saving mode self-consumption	Load≤25W enter power-saving mode
AC charging	
Battery type	Lead acid or lithium battery
Maximum charge current(can be set)	160A
Charge current error	±5A _{dc}
Charge voltage range	40 –58.6V _{dc}
Short circuit protection	Circuit breaker and blown fuse
Circuit breaker phase specifications	2pole, 63A/63A(L1/L2)
PV charging	
Number of MPPT groups	2
Maximum PV open circuit voltage	500V _{dc}
PV operating voltage range	90V _{dc} ~500V _{dc}
MPPT voltage range	90V _{dc} ~450V _{dc}
Battery voltage range	40V _{dc} -58.6V _{dc}
Maximum PV input power	6000W+6000W
Maximum PV input current	22A+22A
PV charging current range (can be set)	0-200A
Charging short circuit protection	Blown fuse
Wiring protection	Reverse polarity protection
Hybrid charging Max charger current specifications (AC charger+PV charger)	
Max charger current(can be set)	0-220A
General specifications	
Operating temperature range	-10°C to 55°C,> 45°C drop runs
Storage temperature range	-25°C ~ 55°C
Humidity range	5% to 95% (Conformal coating protection)
Noise	≤60dB
Heat dissipation	Forced air cooling, variable speed of fan
Communication interface	USB/RS485(/WiFi/GPRS)/ Dry node control
Size (L*W*D)	690mm*590mm*145mm
Weight (kg)	≈32Kg

10.2、 Battery technical parameters

Model	HS51200-10	LFP51300
Nominal Voltage	51.2V	51.2V
Nominal Capacity	200Ah	280Ah/314Ah
Energy(Wh)	10240Wh	14336Wh/16076Wh
Discharging Cut-off Voltage	44.8V ± 0.2V	
Charging Cut-off Voltage	57.6V ± 0.2V	
Nominal Charging Current	40A	
Max. Charging Current	100A (5 sec.)	
Nominal Discharging Current	100A	
Max. Discharging Current	200A	
Peak Discharging Current	210A (5 sec.)	
Communication	RS485/CAN	
Depth of Discharge	90%	
Working Temperature	0°C~50°C Charge	
	-10°C~50°C Discharge	
The Shelf Temperature	-20°C~60°C	
Humidity	5~75%(RH)	
Certificates	CE / UN38.3 / MSDS	
Design Life Cycle	10+Years (25°C/77°F)	
Cycles	≥6000 at 25°C	
Size	690x590x160mm	690x590x258mm
Weight	≤ 85.5Kg	≤ 118Kg

10.3、 All-in-one machine specifications

Item	20Kwh+10Kw	30Kwh+10Kw	40Kwh+10Kw	45Kwh+10Kw	50Kwh+10Kw
Battery Model	HS51200-10 x 2	HS51200-10 x 3 / LFP51300 x 2	HS51200-10 x 4	LFP51300 x 3	HS51200-10 x 5
Energy	20Kwh	30Kwh	40Kwh	45Kwh	50Kwh
Overall size	690x590 x565mm	690x590 x710/761mm	690x590 x855mm	690x590 x1004mm	690x590 x1000mm
Overall Weight	≈218Kg	≈303.5Kg / 283Kg	≈389Kg	≈401Kg	≈474.5Kg

